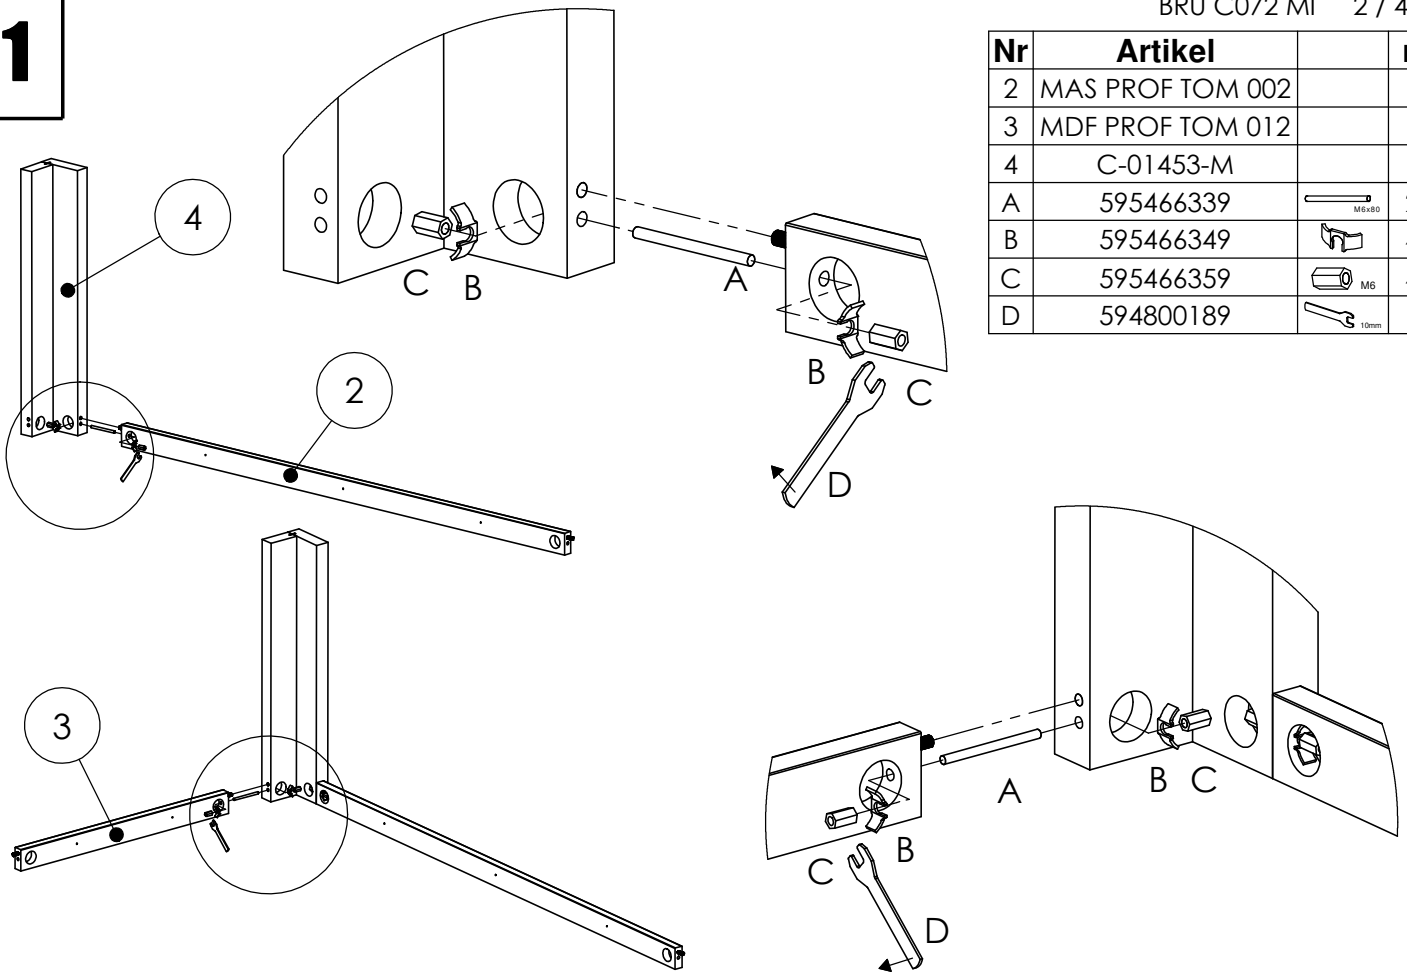




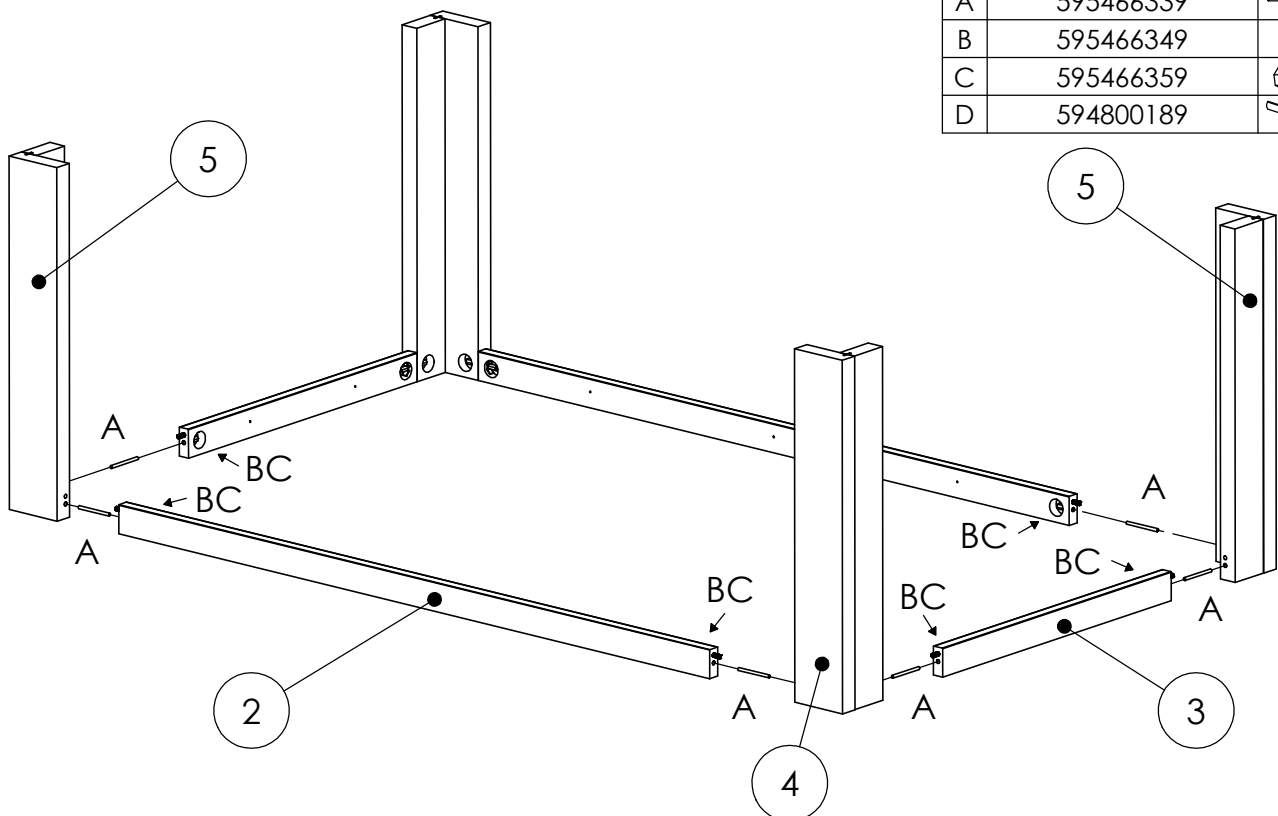




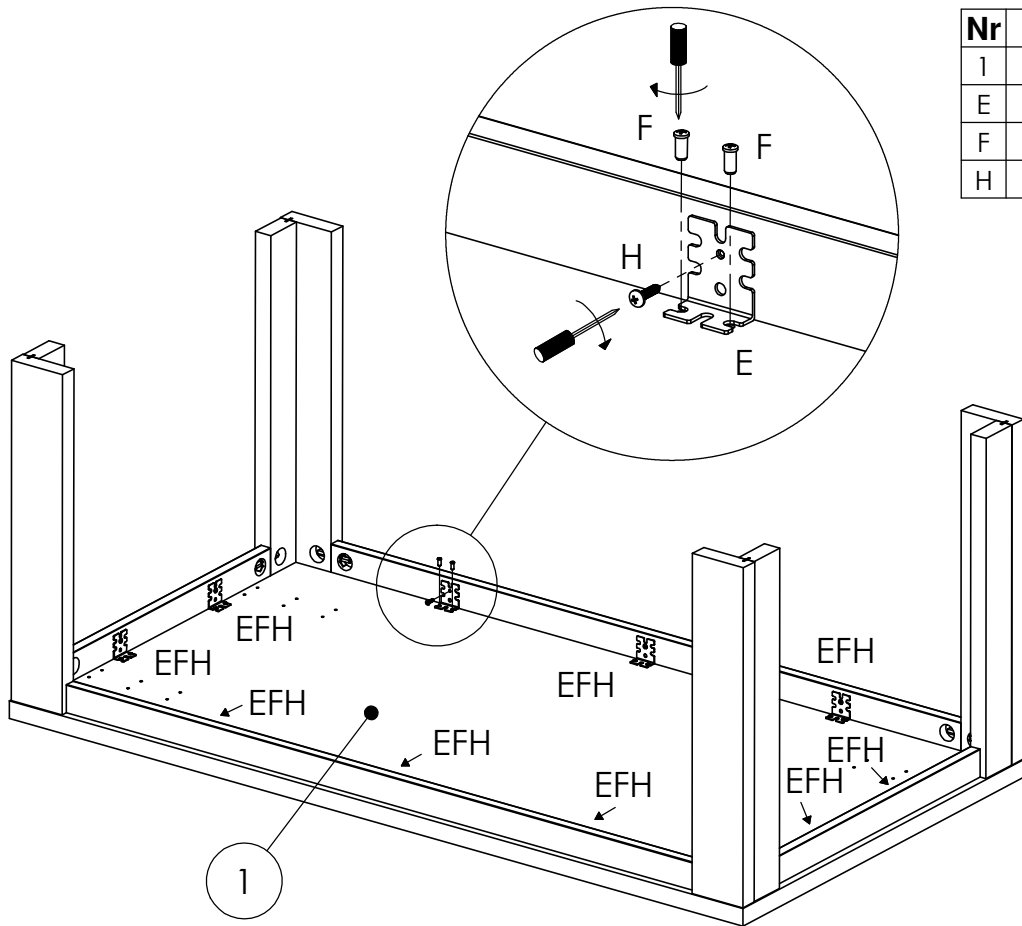


1


Nr	Artikel		n
2	MAS PROF TOM 002		1
3	MDF PROF TOM 012		1
4	C-01453-M		1
A	595466339		2
B	595466349		4
C	595466359		4
D	594800189		1

2


Nr	Artikel		n
2	MAS PROF TOM 002		1
3	MDF PROF TOM 012		1
4	C-01453-M		1
5	C-01454-M		2
A	595466339		6
B	595466349		12
C	595466359		12
D	594800189		1

3

Nr	Artikel		n
1	C-01449		1
E	594805679		10
F	594871109		20
H	594872919		10

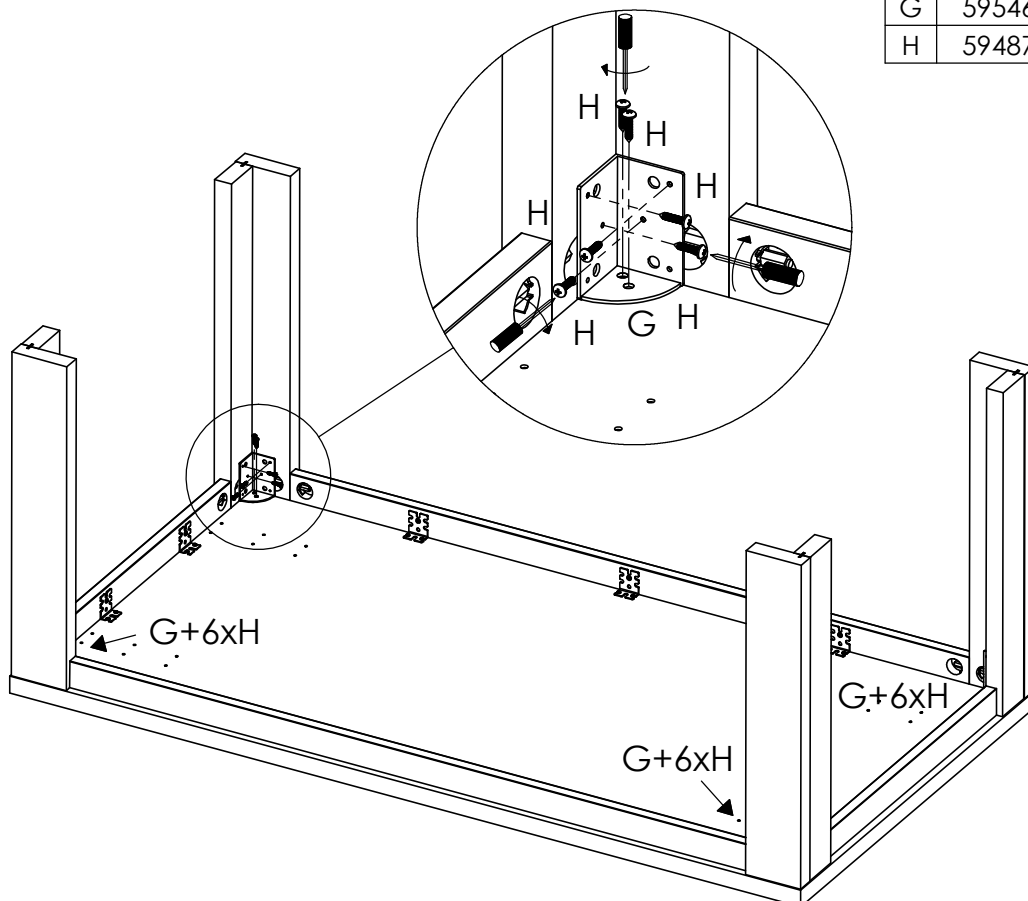4

Nr	Artikel		n
G	595466369		4
H	594872919		24

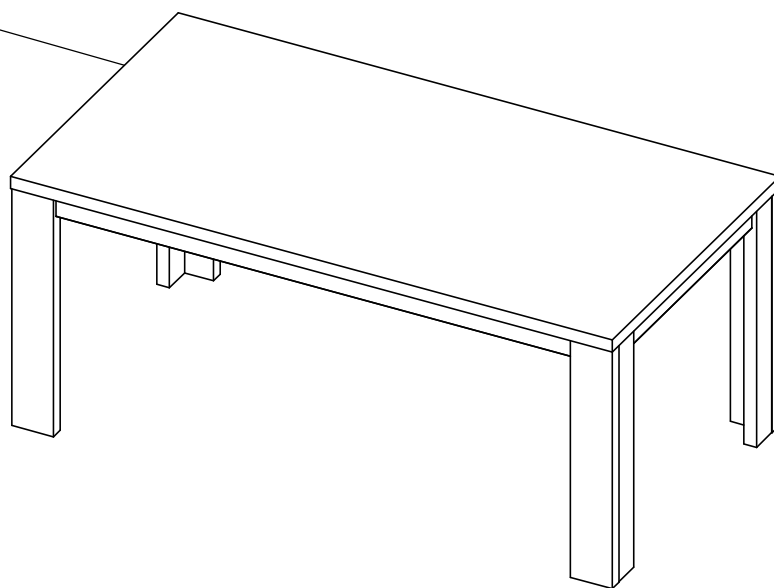5

Dans le cas des extensions,
lire notice des extensions (C193) avant montage!