


Pronto


wonen

MODEL : BOTELLO PDC-4081F

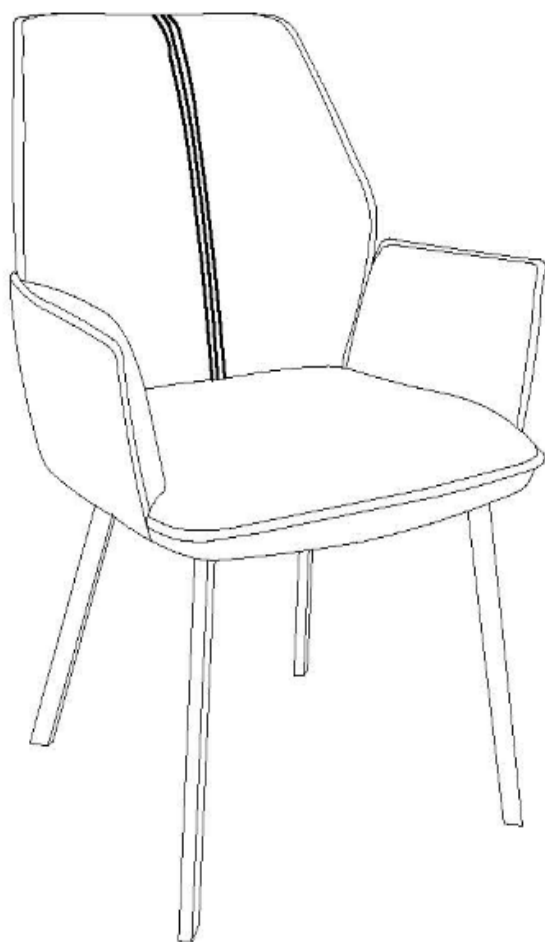

ASSEMBLY INSTRUCTION

A



M5

x1

B



M6*40


C



M6

x4

STEP 1

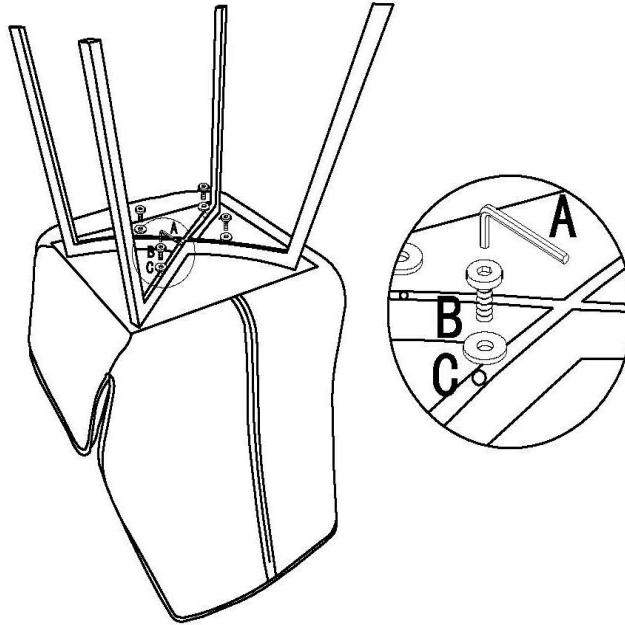

STEP 2

