

# *Pronto*


wonen

**MODEL : BRUNO PDC-2074F**



# ASSEMBLY INSTRUCTION

A



M5

x1

B



M6\*40

x4


C



M6

x4

## STEP 1

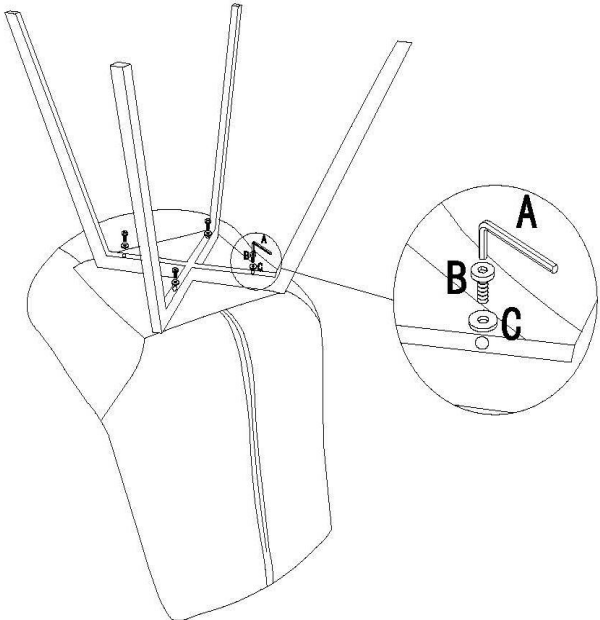

## STEP 2

