

Pronto

wonen

MODEL : SERRADO PDC-925BS



ASSEMBLY INSTRUCTION

A



M6x16 x4

B




M6 x4

C



x1

STEP 1

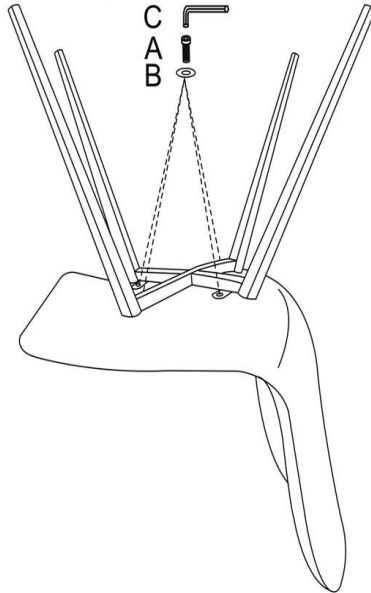

STEP 2

