





Pronto

wonen


MODEL : SIROCCO PDC-2065M



ASSEMBLY INSTRUCTION

A 	B 	C 			
M5	x1	M6*16	x4	M6	x4

STEP 1

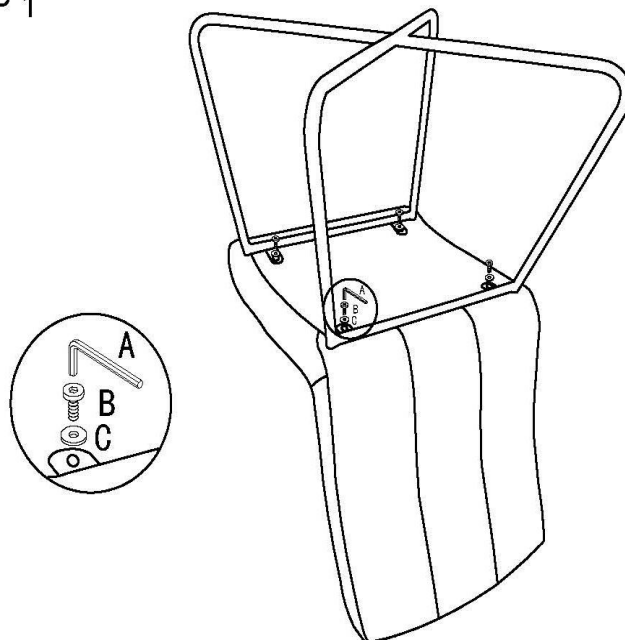

STEP 2

