



Pronto


wonen

MODEL:ZUCCONI PDC-4082

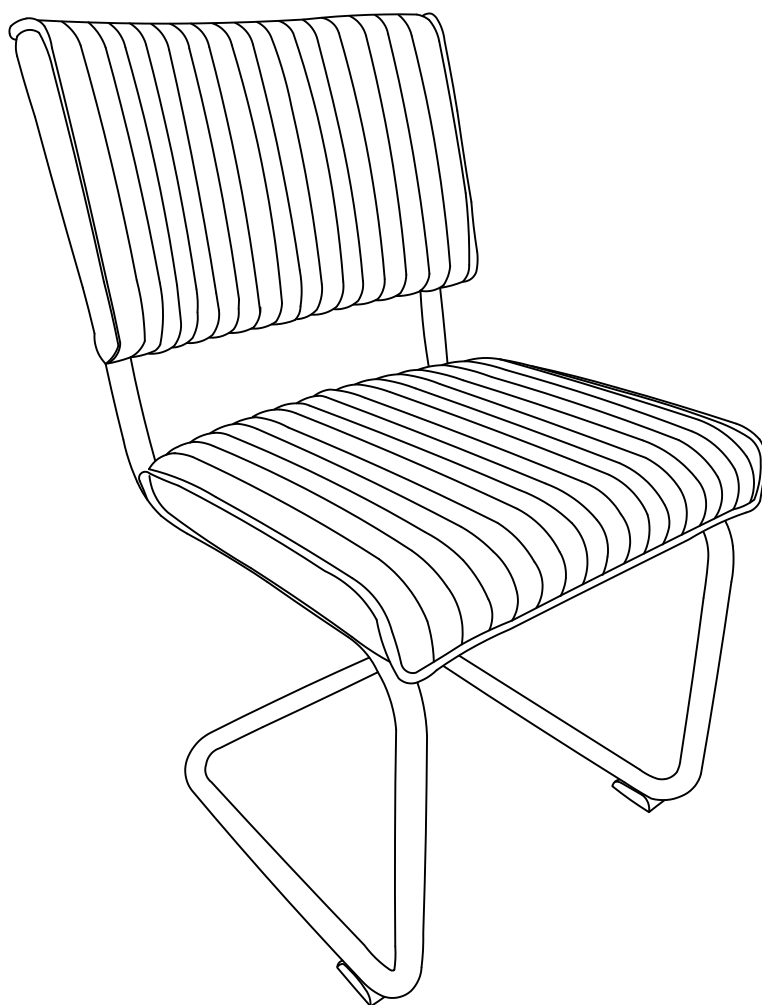

ASSEMBLY INSTRUCTION

A



M4

x1

B



M6*40

x4


C



M6*35

x4


D



M5

x1

STEP 1

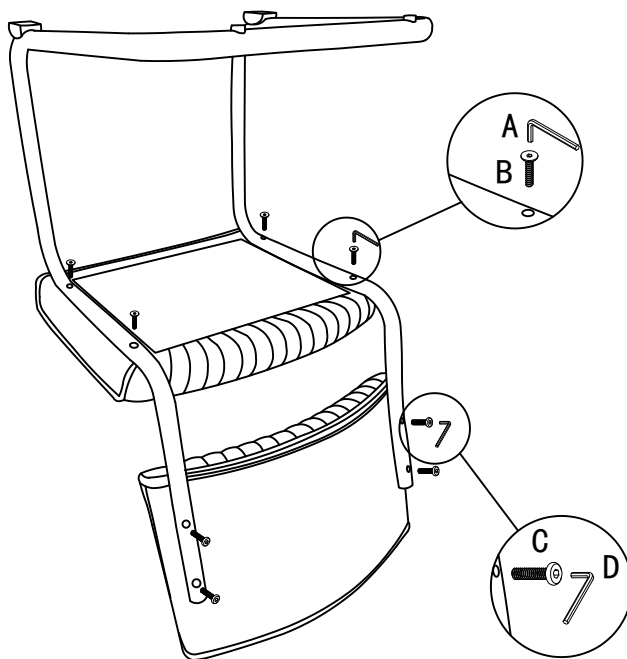

STEP 2

